



# DeWalt DW936 Black Cap Replacement

This guide will show you how to replace the black air filter cap located on the top of the motor.

Written By: Scott Weinhardt



## INTRODUCTION

This guide will show you how to replace the black air filter cap located on the top of the motor.

---



### TOOLS:

- [T20 Torx Screwdriver](#) (1)
-

## Step 1 — Black Air Filter



- Using a T-20 hex head screw, unscrew the two screws located at the top and bottom of the black air filter. The screws are directly above and below the yellow lettering.

## Step 2



- Use your hands to pull the black air filter away from the body of the saw to detach.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 12:00:19 PM.